1. Total Exploded Views and Parts List

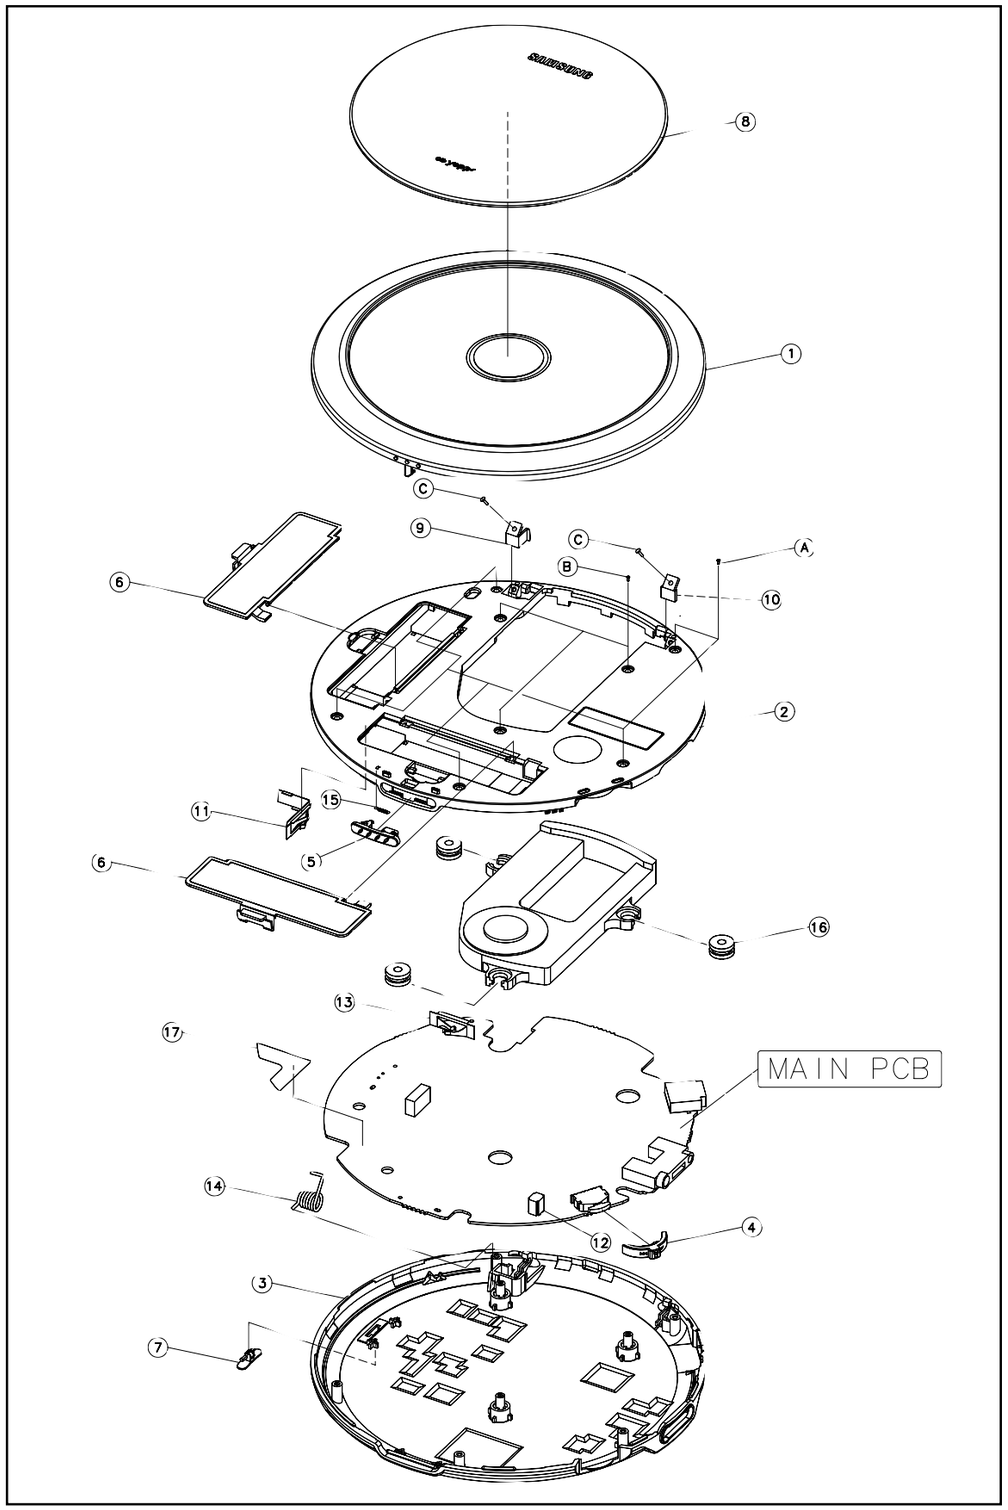

No.	Code No.	Description	Specification	Q'TY	Remark
1	AH64-03048A	CABINET-DOOR AS'Y	ASS'Y	1	
2	AH64-03043A	CABINET-MIDDLE	PC+ABS, SPRAY SILVER	1	
3	AH64-03044A	CABINET-BOTTOM	PC+ABS, SPRAY SILVER	1	MCD-CM550
	AH64-03044B	CABINET-BOTTOM	PC+ABS, SPRAY SILVER	1	MCD-CF550
4	AH64-03046A	KNOB-PLAY	ABS NTRL,Cr-P	1	
5	AH64-03047A	KNOB-OPEN	ABS NTRL,Cr-P	1	
6	AH64-02191C	LID-BATTERY	PC+ABS,SPRAY SILVER	2	
7	AH64-02195A	KNOB-HOLD	PC+ABS,GRAY	1	
8	AH64-03045A	WINDOW-DOOR	ACRYL CLR,SPRAY BLUE	1	MCD-CM550
	AH64-03045B	WINDOW-DOOR	ACRYL CLR,SPRAY VIOLET	1	MCD-CF550
9	AH61-01662A	BRKT-HINGE,L	SUS304 1/4H,T0.5	1	
10	AH61-01663A	BRKT-HINGE,R	SUS304 1/4H,T0.5	1	
11	AH61-01225A	BRKT-BATT TERMINAL	SUS304 3/4H,T0.2	1	
12	AH61-01226A	BRKT-BATT TER(+)	SUS304 3/4H,T0.2	1	
13	AH61-01227A	BRKT-BATT TER(-)	SUS304 3/4H,T0.2	1	
14	AH61-01664A	SPRING-DOOR	SWP PI 1.0	1	
15	AH61-01231A	SPRING-OPEN	SWP PI 0.18	1	
16	AH73-00073A	RUBBER-CD	BUTYL 30	3	
17	AH63-00761C	SHEET-BRKT	PE T0.08,CLEAR	1	
A	6003-001331	SCREW-TAP TITE,CH	TAP 1.7*5, Cr-P	5	
B	6003-001415	SCREW-TAP TITE,CH	TAP 1.4 *4, Cr-P	3	
C	6003-001508	SCREW-TAP TITE,CH	TAP1.4*3, Ni-P	2	

*** Caution : PCB Reassembly Method**

1

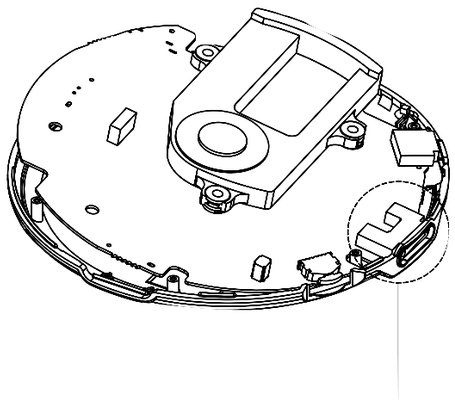

Put the MAIN-PCB's **EARPHONE JACK**
to CABINET-BOTTOM's **JACK HOLE**.

2

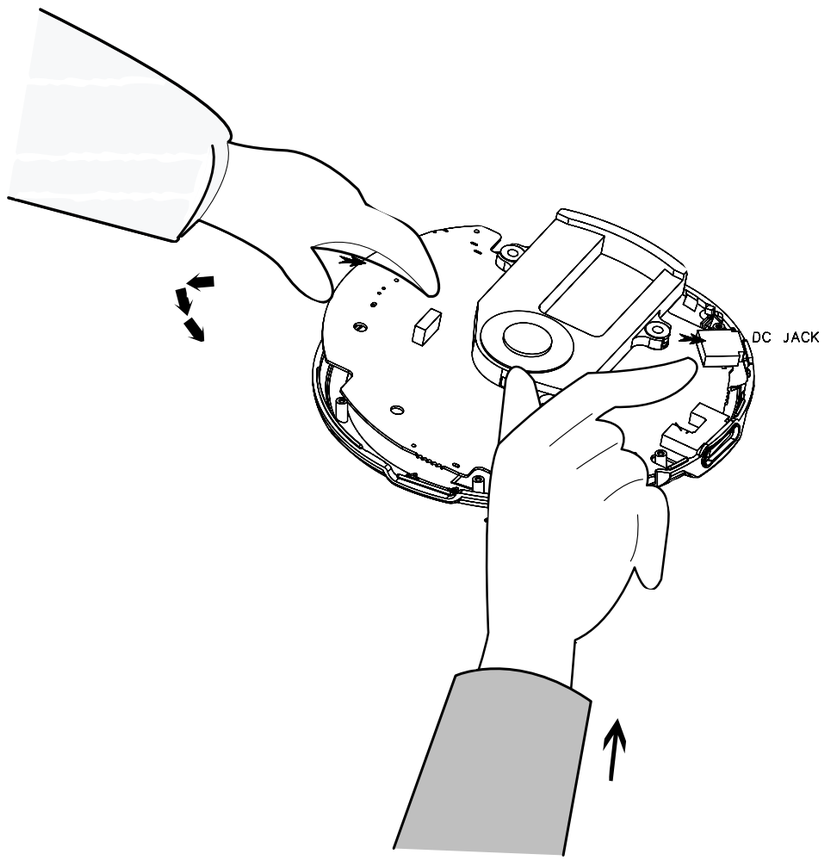

With the MAIN PCB slightly closed,
gently push the DC JACK in the CABINET BOTTOM's HOLE
with your finger, as shown in Figure.

3
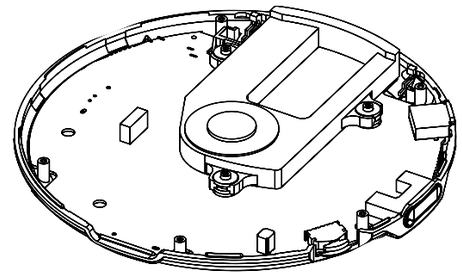
Complete